



Automatic chain and belt tensioner New

TCLAR
TC1RP



Mounting instructions

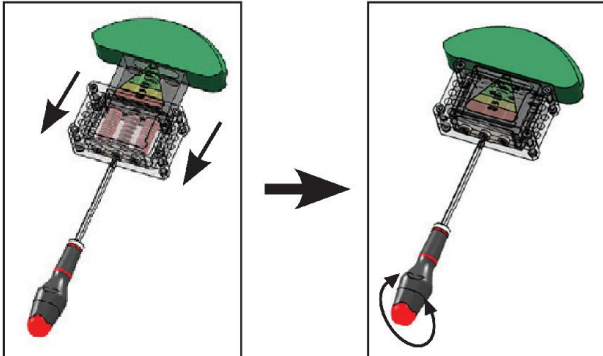


Pre-tension the tensioner using the screws situated under the body

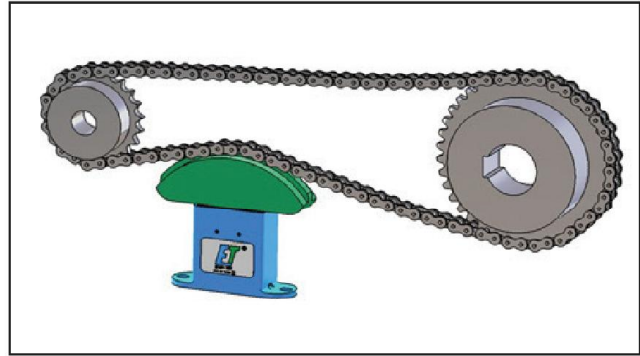


Position the tensioner under the chain (or belt) as close as possible to the sprocket on the slack side

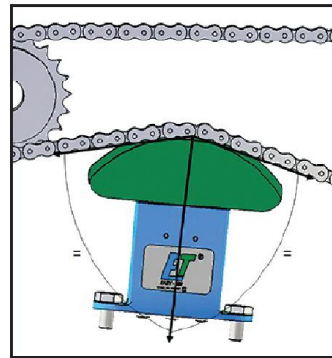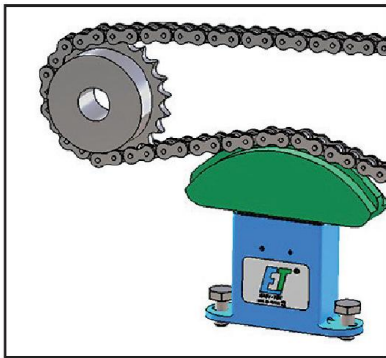

Once the angles of the belt or chain are equidistant to the tensioner, manually put it under tension and tighten.

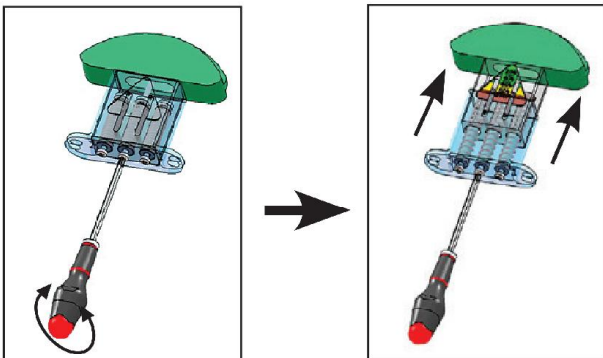

The springs can be loosened to the tension required starting with the one in the middle, leaving the belt (or chain) under pressure. There are two different types of springs.

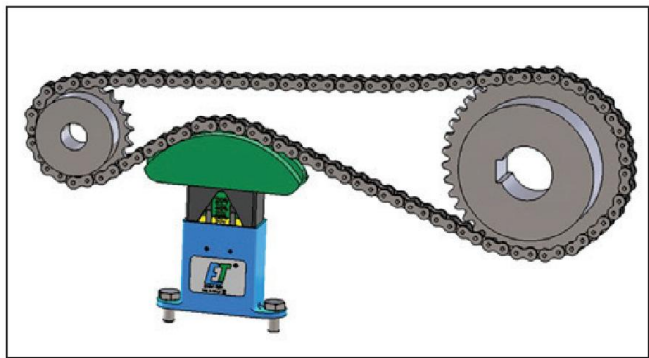

The tensioner is now ready for use. The stroke of the tensioner should be within the green range.